




## Front Seats

### n Adjusting seat position




- 1 Moves the seat forward
- 2 Moves the seat backward

### n Adjusting seatback angle

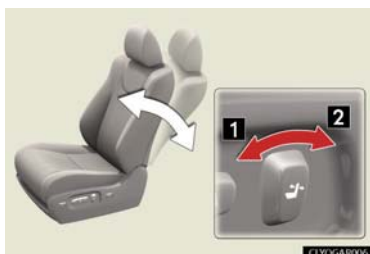


- 1 Tilts the seatback forward
- 2 Reclines the seatback

### n Adjusting the seat cushion

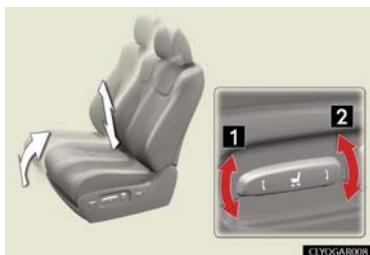

- 1 Raises and lowers the front of the cushion
- 2 Raises and lowers the entire seat

### n Adjusting the lumbar support

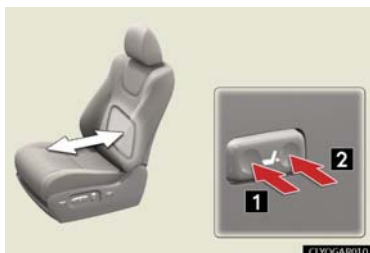


- 1 Firmer
- 2 Softer

## n Adjusting the seat cushion length (if equipped)



- 1** Lengthens the seat cushion
- 2** Shortens the seat cushion

## Head Restraints

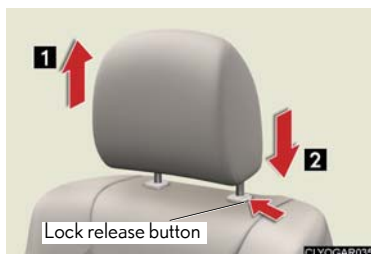

- 1 To raise:** push the head restraint upward.
- 2 To lower:** push the head restraint down while pressing the lock release button.




## Seat Belts

### n Adjusting shoulder belt height (front seats)



- 1 To raise:** push the anchor upward.
- 2 To lower:** depress the button and push the anchor down.

### n Seat Belts comfort guides (outside rear seats)

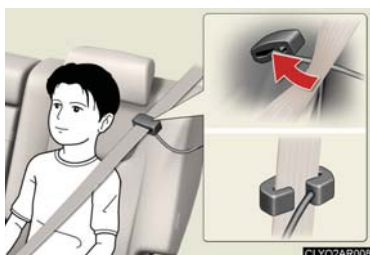

If the shoulder belt sits close to the neck, pass the seat belt through the comfort guide.

## Outside Rear View Mirrors

### n Adjusting the mirrors



- 1 Selects a mirror to adjust ("L": left or "R": right)
- 2 Adjusts the mirror up, down, in, or out using the switch

The mirrors will automatically angle downwards when the vehicle is reversing. This function only operates when either "L" or "R" mirror select button is selected.

### n Folding and extending the mirrors (if equipped)



- 1 Using the switch
- 2 Setting the automatic mode

Automatic mode allows the folding or extending of the mirrors to be linked to operations, such as locking/unlocking of the doors.



## Anti-glare Inside Rear View Mirror


The anti-glare mirror uses a sensor to detect light from vehicles behind and automatically reduces glare.



To turn automatic mode on/off, press the "AUTO" button.

The indicator comes on when automatic mode is turned on.

## Steering Wheel

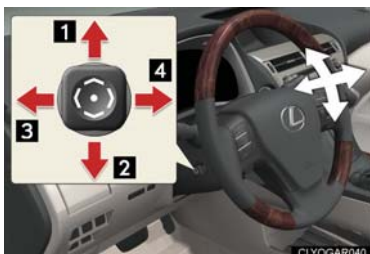

- 1 Up
- 2 Down
- 3 Away from the driver
- 4 Toward the driver

The steering wheel retracts automatically when the "ENGINE START STOP" switch is turned OFF to allow for easy exit and entry. The steering wheel returns automatically to its previously set position when the "ENGINE START STOP" switch is switched to ACCESSORY or IGNITION ON mode.

Vehicles with driving position memory: When exiting the vehicle, the steering wheel retracts only when the driver's seat movement is in a setting other than off and the driver seat belt has been unfastened.

When entering the vehicle, fastening the driver seat belt returns the steering wheel to its previously set position.